



Cyprus Research and
innovation Center Ltd,
Cyprus www.cyric.eu



Consiglio Nazionale delle
Ricerche, Italy
www.cnr.it



Alpes Lasers SA, Switzerland
www.alpeslasers.ch



National Technical University
of Athens, Greece
www.ntua.gr



Technische Universität Wien,
Austria
www.tuwien.ac.at



Friedrich-Alexander-Universi-
taet Erlangen-Nuernberg,
Germany
www.fau.eu



AUG Signals Hellas, Greece
www.augsignals.gr



VIGO System S.A., Poland
www.vigo.com.pl



IREN S.p.A., Italy
www.gruppoiren.it



PHOTONICS PUBLIC PRIVATE PARTNERSHIP



This project has received funding from the European Union's Horizon 2020 research and innovation programme under grant agreement No 731778. The project is an initiative of the Photonics Public Private Partnership. www.photonics21.org



Like us on facebook:
www.facebook.com/WaterSpy_eu



Follow us on LinkedIn:
www.linkedin.com/waterspy-eu



Follow us on Twitter:
[@WaterSpy_Eu](https://twitter.com/WaterSpy_Eu)


www.WaterSpy.eu



Dr. Panayiotis Philimis, Coordinator
www.cyric.eu
info@cyric.eu



*High sensitivity,
portable photonic
device for thorough
water quality analysis*

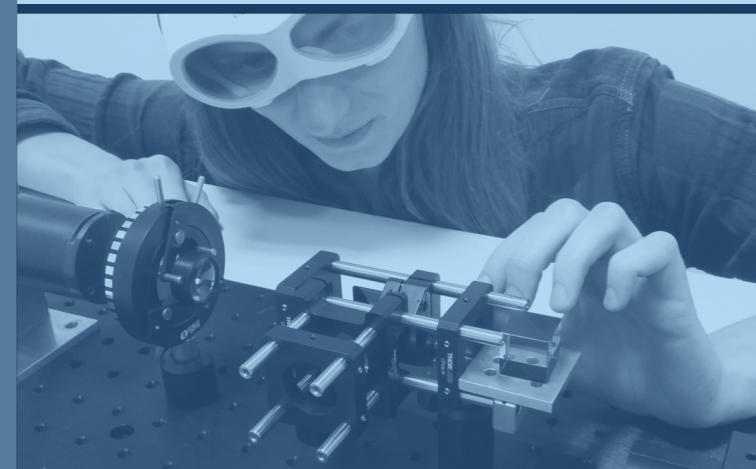


www.WaterSpy.eu

What is WaterSpy?

WaterSpy is a device for pervasive and on-line monitoring of tap water.

For many contaminants, which will lead to human health hazards, good measurement devices are available. For bacterial contamination the situation is worse. Water utilities, public authorities and regulators rely heavily on trustable and fast water analysis. Especially *E. coli*, *Salmonella* and *P. aeruginosa* are of interest for human health. Currently time-consuming and expensive laboratory analysis have to be performed. WaterSpy focuses on these three strains of bacteria and develops an add on device for currently available quality monitoring platforms. The device will be able to perform automated and fast quality analysis for bacterial contaminants in water.


Challenges of the project are to meet the legal requirements for the concentration of contaminants, given in the EU directives on water quality. Due to the very low acceptable concentration of contaminants, the sensitivity of the device has to be very high to catch up with current laboratory analysis.

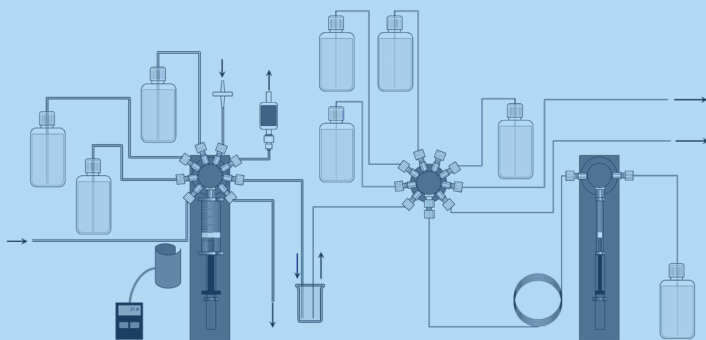

The WaterSpy incubation module automatically grows the target bacteria and cleans itself after the pre-incubation step is finished. The pre-incubation step is needed to meet the required sensitivity demands.

Approach and Objectives

- Key Strategic Objectives:
 - Develop compact photonics technology, capable of identifying selected heterotrophic bacterial cells in the water. Specificity and sensitivity levels will respect regulatory requirements.
 - Validate the technology's cost-effectiveness and suitability for large area coverage.
- WaterSpy develops water quality analysis photonics technology suitable for inline field measurements operating in the mid-infrared region (6-10 μm).
- The solution is based on the combined use of advanced Quantum Cascade Lasers employing the Vernier effect and fast and sensitive Higher Operation Temperature (HOT) photodetectors.
- Targeted analytes will be specific heterotrophic bacterial cells. Several novel techniques are employed for increasing Signal-to-Noise Ratio.
- The device will require about 6 hours for a complete sample analysis. With currently used systems, the same analysis could take up to 3 days.
- The WaterSpy technology will be integrated, for validation purposes, to a water quality monitoring platform, in the form of a portable device add-on.
- Towards the end of the project, the WaterSpy device will be tested at two pilot sites:
 - The Prato water treatment plant, which serves the city of Genova (approx. 580000 inhabitants).
 - The entry point of the Genova water distribution network.

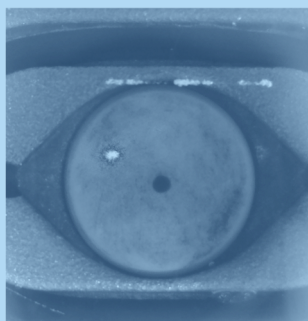

Beads



E. coli

State and Achieved Goals

- The development of a pre-incubation module has been finished. This module enables a significant increase of sensitivity of the WaterSpy device. A sketch is given in the image at the bottom left.
- The optical test setup using an ATR-cell (attenuated total reflection) has been improved, which resulted in a higher Signal-to-Noise Ratio.
- The signal processing software was optimised to compensate for drift and optical resonances in the setup.
- The flow cell which concentrates the prepared water sample using ultrasound and also contains the ATR optics was optimised to be robust against gas bubbles in the cell, which may occur at any time during the measurement procedure.
- The ultrasound concentration was improved and tested with *E. coli* bacteria and Beads. The images in the middle show concentrated samples which are reliably held by the ultrasonic waves.
- The first prototype of the WaterSpy device, which included all submodules was set up and tested at a TUW laboratory. This was the first time, that all modules were tested in an overall system and automated measurements have been performed. Also the control software and signal processing was tested.
- The current approach, which is needed for concentrating only the target bacteria was successfully tested. Attaching anti-bodies against the target bacteria is currently under process.
- The current development is moving towards the first integrated WaterSpy device, which will be tested at a water treatment plant in Italy.